



BOONE SPARE PARTS DIAGRAM AND LIST

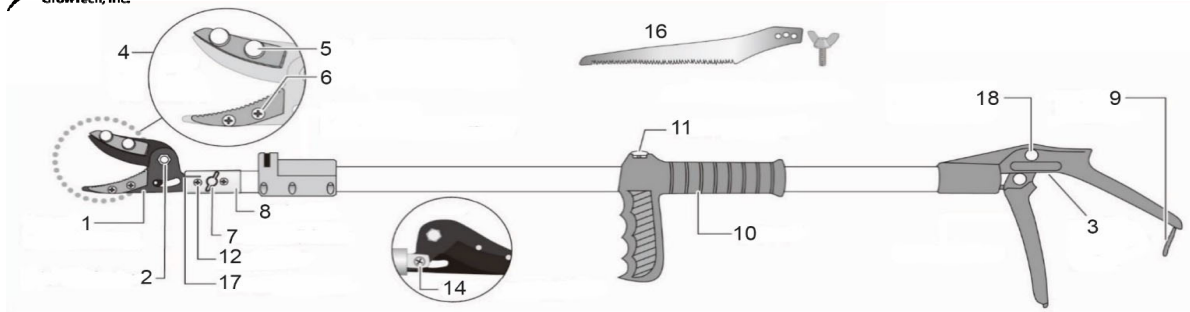


Diagram	Part #	Description	Pic		#	Description	Pic
1	SP-BOONE-1	Blade set			Internal parts for joint area (not shown in diagram)		
2	SP-BOONE-2	Blade bolt/nut			SP-BOONE-19	Rack spring (large)	
3	SP-BOONE-3	Handle set			SP-BOONE-20	Rack spring (small)	
4	SP-BOONE-4	Cut & hold grabbers			SP-BOONE-21	Joint (large)	
5	SP-BOONE-5	Grabber hand screw (top)			SP-BOONE-22	Joint rack	
6	SP-BOONE-6	Grabber Phillips screw (bottom)			SP-BOONE-23	Rack for draft pipe	
7	SP-BOONE-7	Wingnut for saw blade			SP-NASH-20	Plate nut for support grip	
8	SP-BOONE-8	Plate mount attaches blade to pipe			SP-NASH-21	Bracket for support grip	
9	SP-BOONE-9	Handle lock			SP-NASH-22	Assembly screw for support grip	
10	SP-BOONE-10	Support grip			SP-BOONE-27	Link mounting pin	
11	SP-BOONE-11	Support grip top screw			SP-BOONE-28	Cradle	
12	SP-BOONE-12	Screw attaches blade to pipe			SP-BOONE-29	Assembly screw for large joint	
13	SP-BOONE-13	Stop screw attaches handle to pipe					
14	SP-BOONE-14	Screw attaches blade to internal rod					
15	SP-BOONE-15	Bolt and rivet*					
16	SP-BOONE-16	Saw blade and wing nut					
17	SP-BOONE-17	Internal spring					
18	SP-BOONE-18	Handle spring, center bolt, and rivet*					