


190R-Series (Discontinued) - Page 1 of 2

SPARE PARTS DIAGRAM

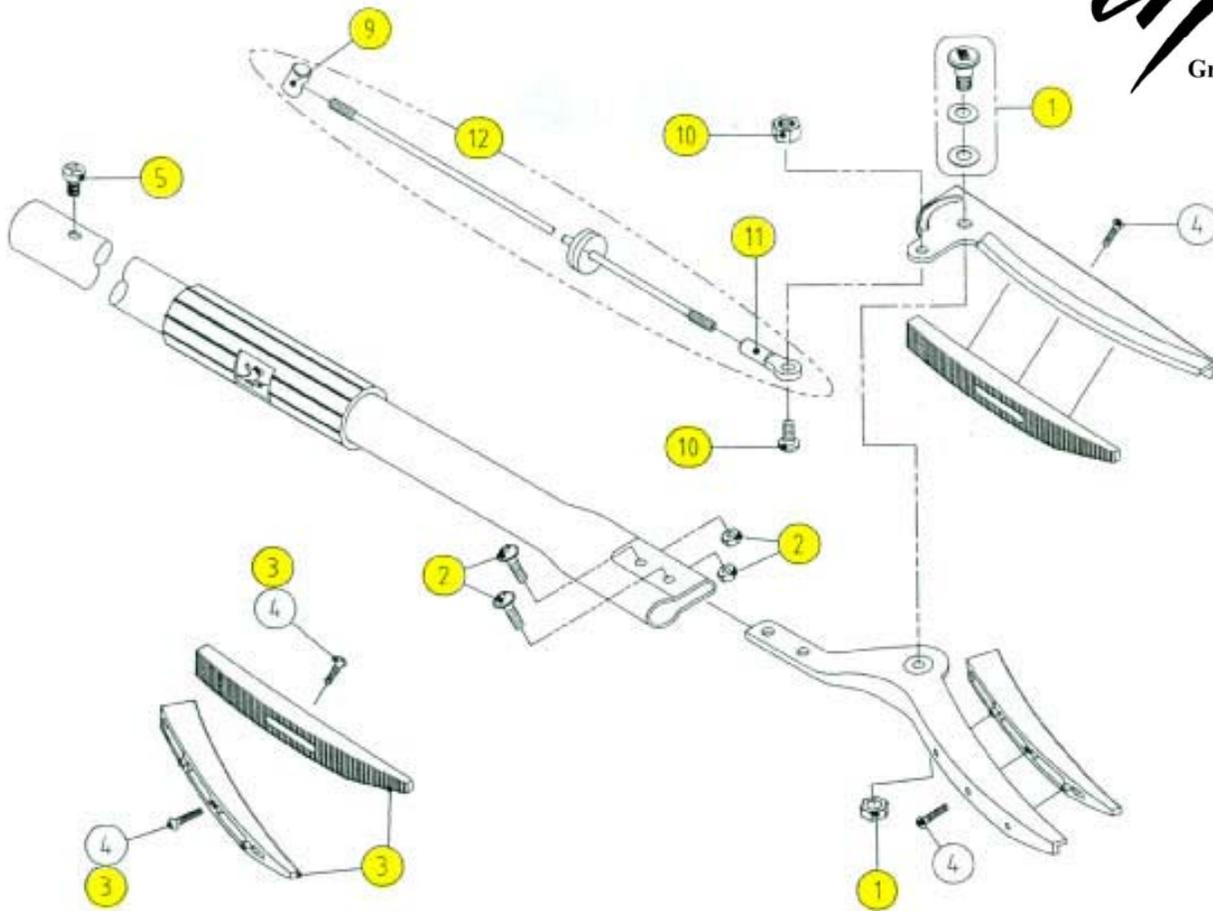

- | | | | |
|------------|--|-------------|---|
| 1. SP-LA34 | Pivot Bolt for 190 Blade Set | 10. SP-LA44 | Screw Set, Blade to Rod |
| 2. SP-LA35 | Screw, Washer, & Nut to attach Blade to Pipe | 11. SP-LA45 | Rod End Cap. (Bolt with loop to attach blade to rod) |
| 3. SP-LA36 | Holding Device Set with 2 Screws | 12. SP-LA47 | Rod for LA-190R19 (includes end cylinder and rod end cap) |
| 4. | Screws for 190 Series | | |
| 5. SP-LA39 | Stop Screw for Handle | | |
| 9. SP-LA43 | End Cylinder for Rod | | |


BLADE SETS:

- | | |
|----------|---|
| SP-19029 | Replacement Shearing Blade Set with Removable Cut and Hold Device |
|----------|---|

***All highlighted items are available from inventory.
All others are available by Special Order.***

190R-Series (Discontinued) - Page 2 of 2

SPARE PARTS DIAGRAM

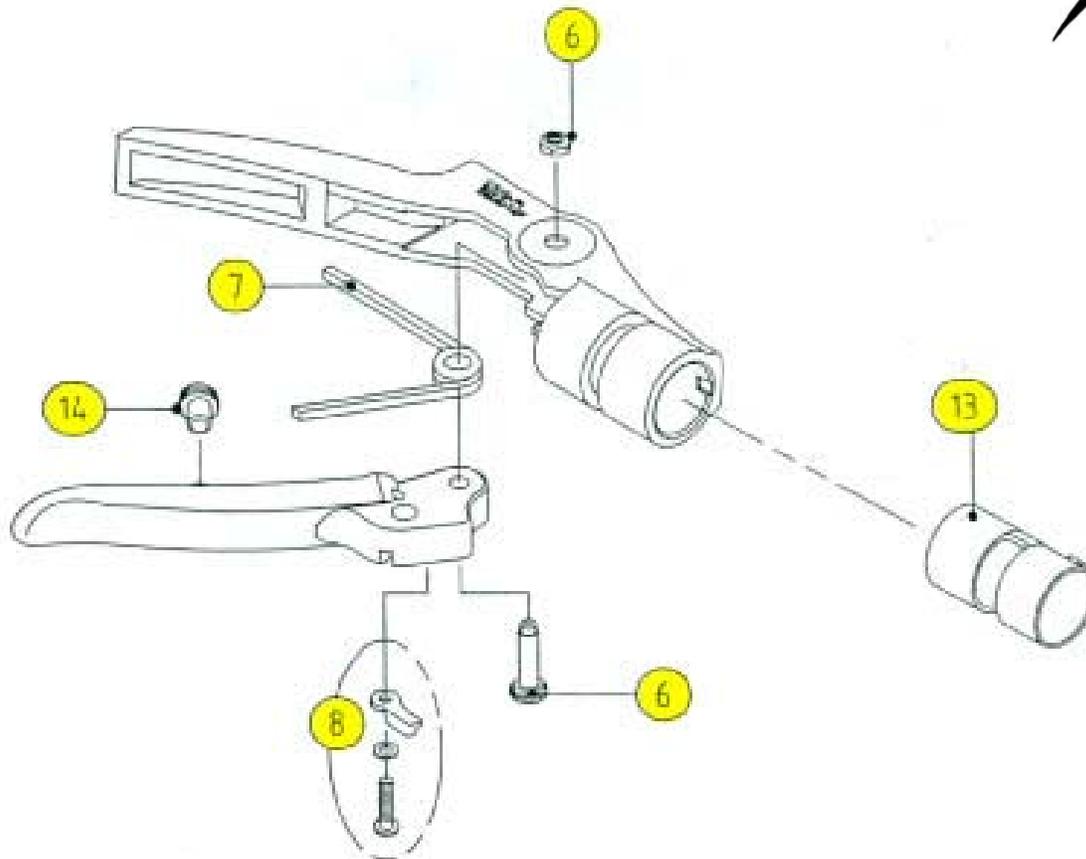

- 6. SP-LA40 Pivot Bolt for Handle
- 7. SP-LA41 Spring for Handle
- 8. SP-LA42 Latch Lock Set for Handle
- 13. SP-LA180HB Sleeve for Grip
- 14. SP-LAXRC Shock Absorber for Handle
- 15. SP-LA18038B Handle Set for 190 Unit